

QUICK REFERENCE GUIDE



DEVICE SELECTION

Select between your Set-Top Box (HD digital receiver), TV, DVD player & auxiliary/misc. device.

REPLAY

Instant replay for DVR.

VIDEO ON DEMAND

Access to movies & more.

DIRECTIONAL PAD

Moves cursor in direction indicated by the arrows. Center button selects items. Browse channels while watching TV.

EXIT

Exits any screen or menu and returns to last channel viewed.




Decreases transparency of TV program info overlay.



Displays virtual keyboard.



Increases transparency of TV program info overlay. Accesses Web address bar in TV Web Portal.

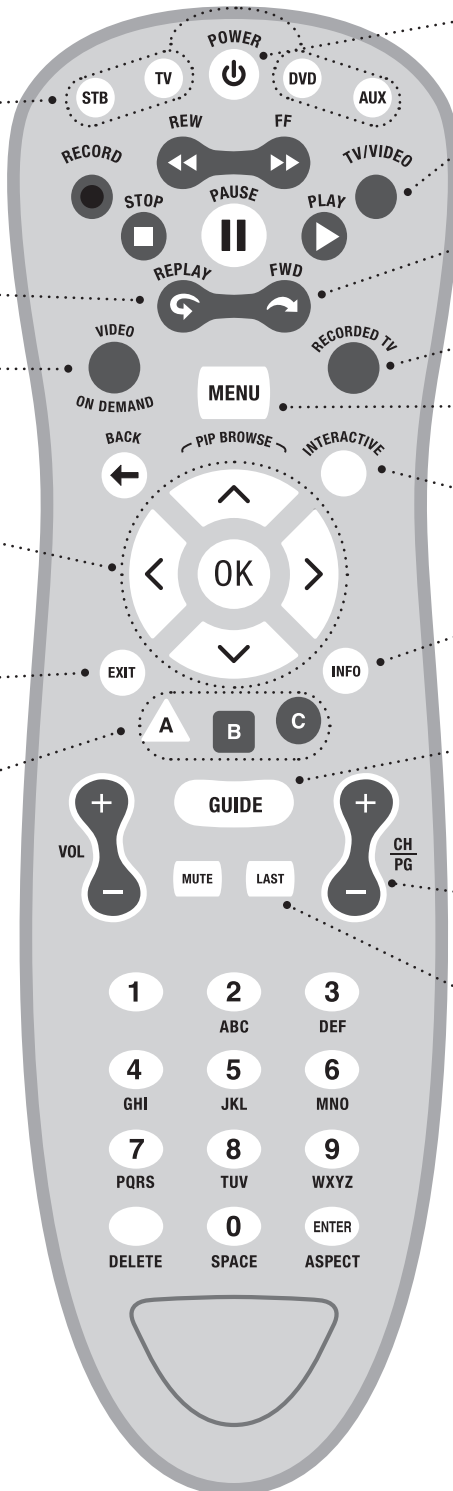

POWER

Turns ON/OFF selected device.

TV/VIDEO

Switch between TV and Video inputs.

FORWARD

Advances to live programming (DVR).

RECORDED TV LIST

MAIN MENU

Accesses Main Menu navigation.

TV WEB PORTAL MENU

Activates TV Web Portal Menu.

PROGRAM INFORMATION

Displays additional program information.

ELECTRONIC PROGRAM GUIDE (Channel Guide)

Multiple clicks scrolls through Favorites lists.

CHANNEL/PAGE

Displays six channels at a time on the Electronic Program Guide.

LAST

Returns to last channel viewed.